



NOTES:

- 1) SEALANT IS A TWO STEP APPLICATION BEHIND THE TOP OF THE FLASHING MEMBRANE AND THEN THE TOP OF THE TERMINATION BAR.
- 2) SURFACE TO WHICH SEALANT IS APPLIED MUST BE CLEAN.
- 3) SEALANT IS A MAINTENANCE ITEM AND NOT COVERED BY THE FLEX ROOF WARRANTY.
- 4) TERMINATION BAR IS TO BE SECURELY ANCHORED WITH APPROVED FASTENERS AND MUST PROVIDE ADEQUATE COMPRESSION TO THE MEMBRANE AND THE SEALANT.

TITLE WALL FLASHING TO SIDING TRANSITION	
NAME DETAIL 2.12	
DRAWN BY: MG	DATE: 8/10/2023
APPLICABLE TO ALL	
FLEX ROOFING SYSTEMS	
FLEX MEMBRANE INTERNATIONAL	5103A POTTSVILLE PIKE READING, PA 19605 800-969-0108 FLEXROOFINGSYSTEMS.COM