



## 2' X3' RHINOBOND FASTENING PATTERN


PERIMETER & CORNER ATTACHMENT TO MEET FM 1-90 GUIDELINES



FLEX RHINOBOND PLATE

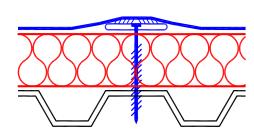

FLEX FASTENER AND RHINOBOND PLATE

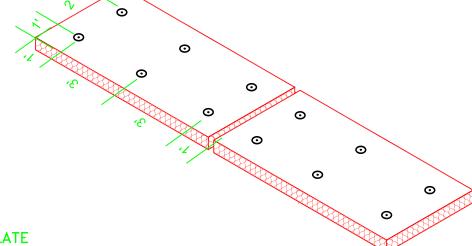

## **NOTES:**

1) PERIMETER AND CORNER AREAS ARE DETERMINED

IN ACCORDANCE WITH ASCE-7:

 $\frac{1}{10}$  LEAST PLAN WIDTH OR

 $\frac{4}{10}$  ROOF HEIGHT BUT NOT LESS THAN 4 FT.

- 2) BOARDS CROSSING PERIMETER/CORNER AREA INTO FIELD AREA SHALL BE ATTACHED ACCORDING TO RESPECTIVE PERIMETER/CORNER RATES.
- 3) FOR HEIGHT > 60 FT, CORNER IS "L" SHAPED WITH DIMENSIONS (2 X "PERIMETER").

TITLE FLEX RHINDBOND 2X3 FASTENING

NAME: DETAIL NO. R-2

DRAWN BY: SK DATE:

12/2013

APPLICABLE TO ALL FLEX RHINDBOND ATTACHED ROOFING SYSTEMS

FLEX **MEMBRANE** INTERNATIONAL FlexRoofingSystems.com

2670 LEISCZ'S BRIDGE RD. LEESPORT, PA 19533 800-969-0108