
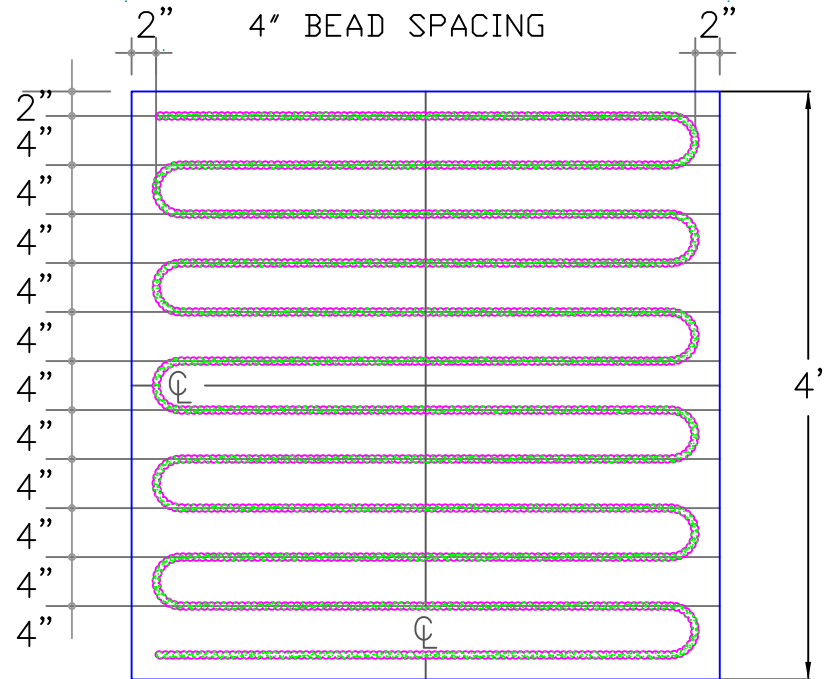
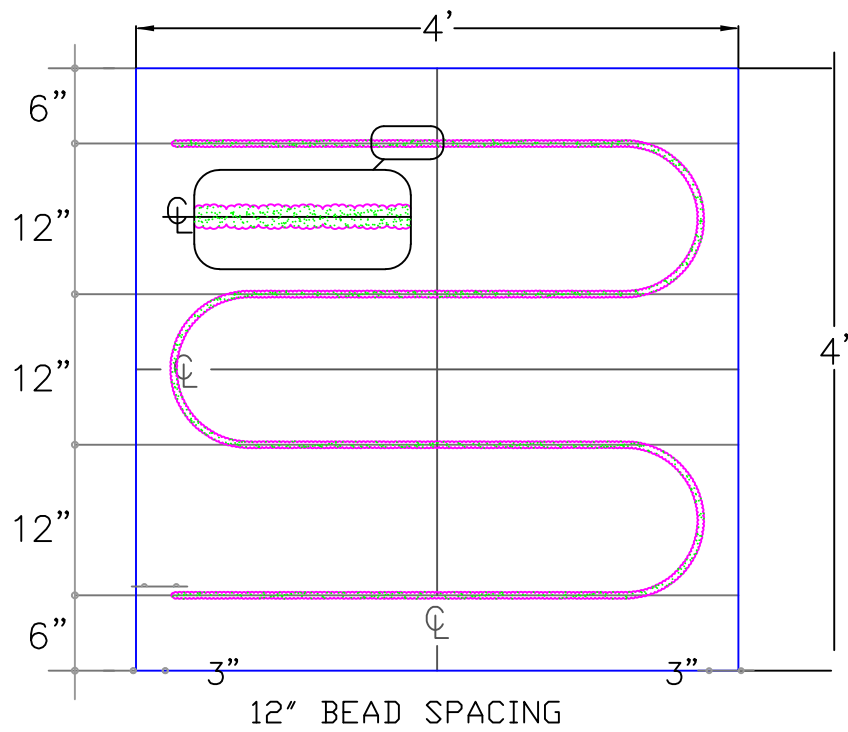


PREVIOUSLY UNEXPOSED ASPHALT OR RESIDUE MUST BE PRIMED WITH FLEX LRFA PRIMER.

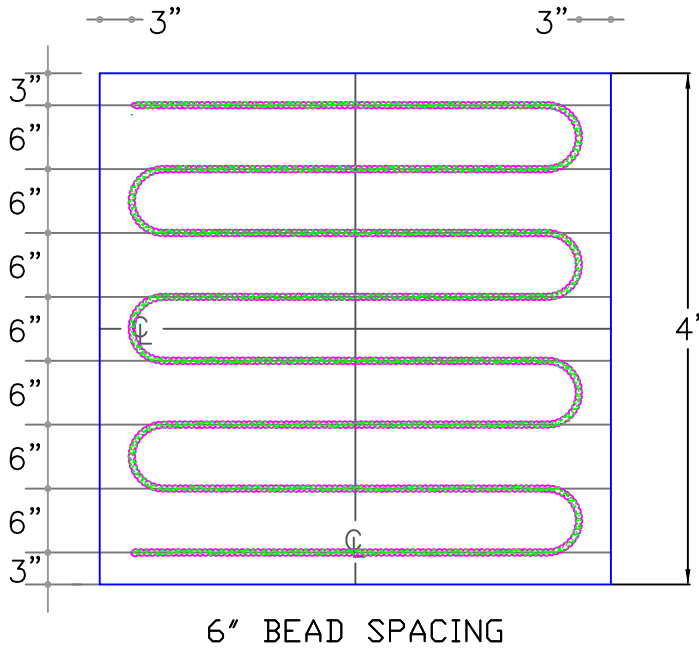

NOTES:

1) THE SURFACE TO WHICH ADHESIVE IS TO BE APPLIED SHALL BE DRY, FREE OF DUST, PROTRUSIONS, SHARP EDGES, LOOSE OR FOREIGN MATERIALS, OIL, AND GREASE. CLEAN AREA WITH AN AIR BLOWER.

2) WALK THE BOARDS INTO THE ADHESIVE AND ROLL USING A 30" WIDE SEGMENTED ROLLER MINIMUM 100 LBS. TO ENSURE FULL EMBEDMENT.

3) ONE PERSON SHOULD BE DESIGNATED TO WALK AND ROLL IN ALL BOARDS. RELIEF CUTS MAY BE NECESSARY TO ALLOW LIFTED BOARD TO LAY FLAT OR APPLY CONSTANT WEIGHT (20 LB MIN.) FOR 15 - 20 MINUTES TO ACHIEVE ADEQUATE ADHESION.

TITLE		INSULATION/COVERBOARD ATTACHMENT USING LOW RISE FOAM ADHESIVE BEADS	
NAME:		DETAIL 6.25	
DRAWN BY:		MG	DATE: 2024
APPLICABLE TO ALL			
FLEX ROOFING SYSTEMS			
FLEX MEMBRANE INTERNATIONAL		5103A POTTSVILLE PIKE READING, PA 19605 800-969-0108 FLEXROOFINGSYSTEMS.COM	