


## FLEX WALKWAY PAD

FLEX WALKWAY PAD IS NOT TO BE INSTALLED IN CONTINUOUS SECTIONS EXCEEDING 10' IN LENGTH. LAYOUT THE WALKWAY PAD IN SUCH A MANNER AS TO NOT COVER THE HOT AIR WELDED SEAMS OF THE FIELD MEMBRANE WHENEVER POSSIBLE. ADHERING THE WALKWAY PAD TO THE FIELD MEMBRANE WITH FLEX BONDING ADHESIVE IS OPTIONAL. HOT AIR WELD ALL EDGES OF THE WALKWAY PAD A MIN. 2" WIDE WELD TO THE FIELD MEMBRANE.

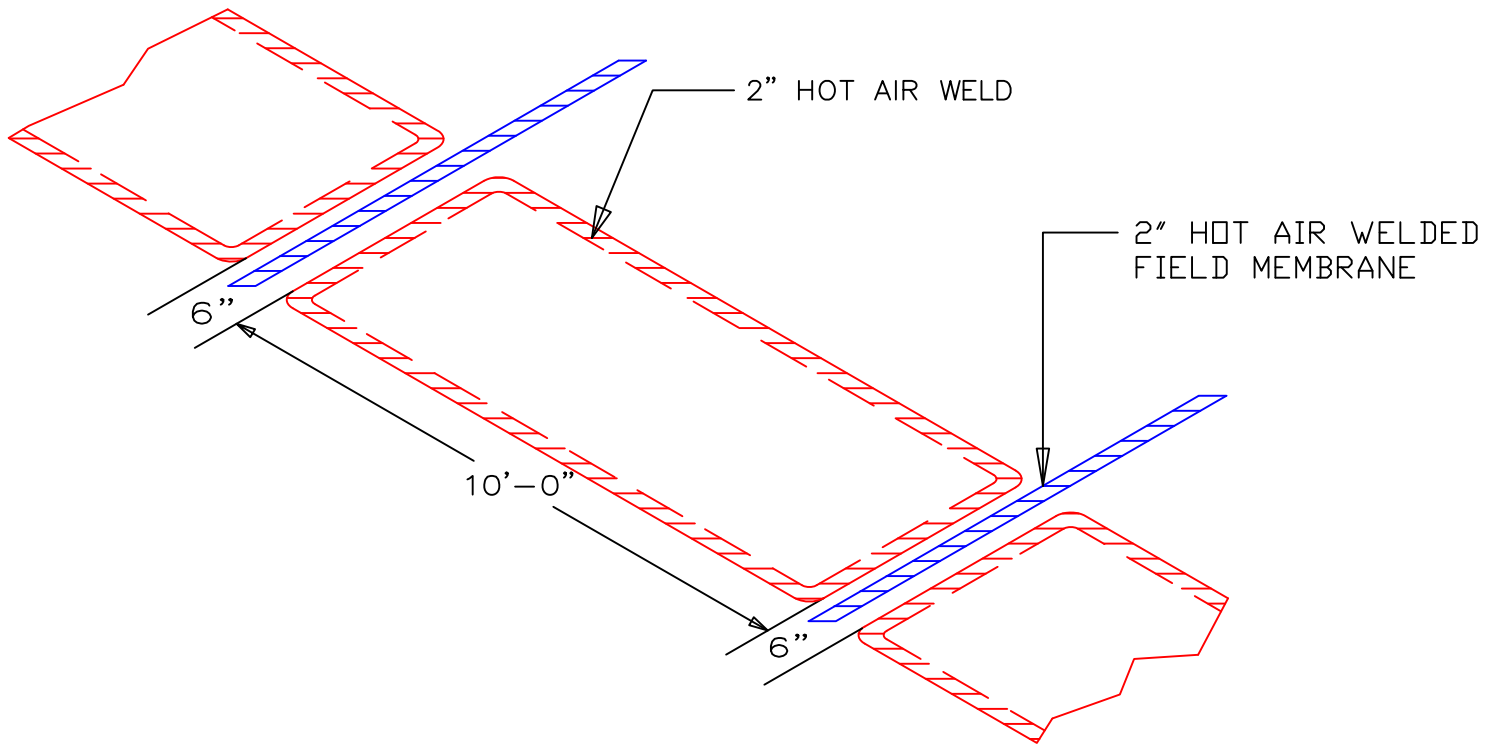

TITLE	FLEX WALKWAY PAD DETAIL	
NAME	DETAIL NO. 5.40	
DRAWN BY:	MG	DATE: 4/2024
APPLICABLE TO ALL FLEX		
ROOFING SYSTEMS		
FLEX MEMBRANE INTERNATIONAL	5103A POTTSVILLE PIKE READING, PA 19605 800-969-0108 FLEXROOFINGSYSTEMS.COM	